

## Seashell 1 Compatible Cameras

For unlisted cameras, please check fitting sheets, pages 4 – 7. \* Indicates that the Seashell will not have access to the power switch with that particular camera model.

Company	Model
<b>Agfa</b>	1, 100, 102, 103, 104, 105, 505x, 1338mT, 1438m, 2030m, 2338mT, DC733i, DC733s, DC830i, DC833m
<b>Aigo</b>	F100, P1, T30, T35, T60, * T1000, T1028, T1068, T1200, T1258, T1260, T1428, T1458, V68, V80, V500, V630, V700, V720, V728, V740, V760, V780, V800, V830, V860, V866, V880, V890, V1000, V1018, V1080, W148
<b>BenQ</b>	C520, C530, C630, C750, C850, C1020, C1060, C1220, C1230, C1250, C1255, C1460, E510, E520, E605, E720, E800, E820, E1000, E1020, E1030, E1035, E1040, E1050, E1050t, E1220, E1230, E1240, E1250, E1260, L1020, L1050, T700, T800, T850, T1260, X600, X710, X720, X725, X835, W1220
<b>Canon</b>	A2200, A3000, A3000IS, A3100, A3100IS, A3200IS, A3300, IXUS30, IXUS40, IXUS50, IXUS55, IXUS60, IXUS65, IXUS70, IXUS75, IXUS80 IS, IXUS85IS, IXUS90IS, IXUS95IS, IXUS100IS, IXUS105, IXUS105IS, IXUS110IS, IXUS120IS, IXUS130, IXUS200IS, IXUS210, IXUS400, IXUS430, IXUS500, IXUS700, IXUS750, *IXUS800IS, IXUS850IS, IXUS860IS, IXUS870IS, IXUS900TI, *IXUS950IS, IXUS960IS, *IXUS970IS, IXUS980IS, IXUS990IS, IXUS i, IXUS i5, IXUS i7, IXUS iZoom, IXUS i7 Zoom, IXUS IIs, IXUS II, IXUS Wireless, IXUS V3, IXY10, IXY10S, IXY20IS, IXY25IS, IXY30, IXY30a, IXY40, IXY50, IXY55, IXY60, IXY70, IXY80, IXY90, IXY95IS, IXY110IS, IXY200F, IXY210F, IXY210IS, IXY220IS, IXY320, IXY400, IXY400F, IXY 410F, IXY450, IXY500, IXY510IS, IXY600, IXY700, IXY800IS, *IXY810IS, IXY820IS, IXY830IS, IXY900IS, IXY910IS, IXY920IS, IXY930IS, IXY1000, IXY2000IS, IXY3000IS, IXY L, IXY L2, IXY L3, IXY L4, IXY Wireless, SD10, SD20, SD30, SD40, SD100, SD110, SD200, SD300, SD430, SD450, SD500, SD550, SD600, SD630, SD700IS, SD750, SD770IS, SD780IS, SD790IS, SD800IS, *SD850IS, SD870IS, SD880IS, *SD890IS, SD900, SD940IS, SD950IS, SD960IS, SD970IS, SD980IS, SD990IS, SD1000, SD1100IS, SD1200IS, SD1300IS, SD1400IS, SD3500IS, S95, S230, S400, S410, S500
<b>Casio</b>	FC100, FC150, FC160S, S5, S6, S7, S8, S10, S12, S100, S500, S600, S770, S880, Z1, Z2, Z3, Z4, Z5, Z6, Z7, Z8, Z9, Z10,Z11, Z19, Z20, Z25, Z27, Z29, Z30, Z33, Z35, Z37, Z40, Z50, Z55, Z57, Z60, Z65, Z70, Z75, Z77, Z80, Z85, Z90, Z100, Z110, Z120, Z150, Z200, Z250, Z270, Z280, Z300, Z330, Z350, Z370, Z400, Z450, Z500, Z550, Z600, Z670, Z700, Z750, Z800, Z850, Z1000, Z1050, Z1080, Z1200, Z1200SR, Z3000, ZS5, ZS10
<b>Fujifilm</b>	A100, A150, A170, A180, A175, A220, A225, A400, A500, AV100, AV105, AV110, AV120, AV130, AV150, AV180, AV200, AV205, AV230, AV235, AV250, AV255, AV280, AV285, AX200, AX205, AX245W, AX250, AX280, AX300, AX305, AX330, AX335, AX350, AX355, AX380, AX385, F10, F11, F20, F30, F31fd, F40fd, F47fd, F50fd, F60fd, F70EXR, F80EXR, F85EXR, F75, F85, F200EXR, F455, F460, F470, F480, F100fd, F200, J10, J20, J25, J26, J27, J30, J32, J35, J37, J38, J50, J100, J120, J150W, J210, J250, JV100, JV105, JV110, JV150, JV160, JV170, JV200, JV205, JV250, JV255, JX200, JX205, JX210, JX250, JX255, JX280, JX300, JX305, JX350, JX355, JX400, JX405, JX530, JZ300, JZ305, JZ310, JZ500, JZ505, JZ510, J15fd, J110W, J150W, T200, T205, T300, T305, V10
<b>GE</b>	A730, A735, A830, A835, A950, A1030, A1035, A1050, A1150, A1200, A1230, A1235, A1250, A1255, A1455, A1456W, C1033, C1233, E840S, E850, E1040, E1050, E1055W, E1240, E1250W, E1250TW, E1255, E1255W, E1450W, E1480W, E1486TW, E1680W, J1050, J1250, J1455, J1470S
<b>Haier</b>	A21, G20, G30, L90, L1080, MA5B, S40, S50, S52, S61, S66, T70, V80, V1080, V1082, V1280T, X80, X90
<b>Hitachi</b>	HDC-502, HDC-507, HDC-509, HDC-632, HDC-841, HDC-1231, HDC-1241
<b>Kodak</b>	C140, C142, C160, C180, C182, C190, C763, C913, C1013, M320, M340, M341, M380, M420, M530, M550, M575, M753, M763IS, M853, M863IS, M873, M883, M893 IS, M1033, M1063 IS, M1073IS, M1093IS, M2008, MD30, Touch, V550, V603, V1073, V1273, V530 Zoom, V550 Zoom
<b>Leica</b>	*C-LUX 1, *C-LUX 2, *C-LUX 3

<b>Nikon</b>	L2, L3, L6, L10, L11, L12, L14, L15, L19, L20, L22, L23, S70, S200, S210, S220, S230, S500, S510, S520, S550, S560, S570, S600, S610, S610C, S620, S630, S640, S700, S710, S3000, S3100, S4000, S4100, S5100, S6000, S6100
<b>Olympus</b>	FE20, FE25, FE26, FE35, FE45, FE46, FE47, FE130, FE140, FE150, FE160, FE180, FE190, FE200, FE220, FE220D, FE230, FE240, FE250, FE280, FE290, FE300, FE320, FE330, FE340, FE350, FE350 Wide, FE360, FE370, FE3000, FE3010, FE4000, FE4010, FE4020, FE4030, FE4040, FE4050, FE5000, FE5010, FE5020, FE5030, FE5050, FE5500, $\mu$ 700, $\mu$ 710, $\mu$ 740, $\mu$ 750, $\mu$ 760, $\mu$ 780, $\mu$ 810, $\mu$ 820, $\mu$ 830, $\mu$ 840, $\mu$ 1000, $\mu$ 1010, $\mu$ 1020, $\mu$ 1200, $\mu$ 1060, $\mu$ 5000, $\mu$ 5010, $\mu$ 7000, $\mu$ 7010, $\mu$ 7020, $\mu$ 7030, $\mu$ 7040, $\mu$ 7050, VG-110, VG-120, VG-130, VG-140, X600, X905, X915, X940
<b>Panasonic</b>	*F516, *FH1, *FH2, *FH3, *FH5, *FH-7, *FH20, *FH22, *FH25, *FH27, *FS1, *FS2, *FS3, *FS5, *FS6, *FS7, *FS10, *FS11, *FS12, *FS15, *FS18, *FS20, *FS25, *FS30, *FS33, *FS42, *FS62, *FX01, *FX2, *FX3, *FX07, *FX7, *FX8, *FX9, *FX10, *FX12, *FX30, *FX33, *FX35, *FX36, *FX37, *FX38, *FX40, *FX48, *FX68, *FX50, *FX55, *FX60, *FX65, *FX66, *FX77, *FX78, *FX100, *FX150, *FX180, *FX500, *FX520, *FX550, *FX580, *LS85, S1, S3, *ZR1, *ZR3, *ZX1, *ZX3
<b>Pentax</b>	50, A10, A20, A30, A36, A40, E40, E50, E70, E85, E75, E60, E65, E70L, E90, H90, L20, L36, L50, M10, M20, M30, M40, M50, M60, M85, M90, P70, P80, RS1000, RS1500, S, S5i, S5n, S5z, S1, S4, S4i, S6, S7, S10, S12, S30, S40, S45, S50, S55, S60, T10, T20, T30, V10, V20, W60, SV, Svi, Z10
<b>Polaroid</b>	i737, i834, i835, i836, i1035, i1037, i1237, i1437, T830, T1455
<b>Praktica</b>	5203, 6105, 6403, 6503, 7103, 7203, 7303, 8203, 8213, 8303, 8403, 8503, 4-Z50S, 14-Z5, 14-04, 12-Z5, 12-Z4, 12-XS, 12-TS, 12-23, 12-04, 12-03, 10-XS, 12-Z4TS, 10-X3, 10-TS, 10-23, 10-03, DC 60, DCZ 5.8, DCZ 6.8, DCZ 7.2, DCZ 7.3, DCZ 7.4, DCZ 8.2, DCZ 8.3, DCZ 10.3, DCZ 10.4, DCZ 12.1, DCZ 14.1, Dpix 530Z, DPix 740Z, DPix 750Z, DPix 820Z, DPix 1000Z, DPix 3200, DPix 3300, DPix 5100, DPix 5200, DPix 9000
<b>Premier</b>	DC67, DC68, DC87, DC593, DC6360, DM6365, DC6370, DC6371, DM7362, DM7365, DS7450, DSA350, ES6, SL4, SL5, SL8, SL53, SL58, SL63, SL68, SL83, SL86, SL1000
<b>Ricoh</b>	R1, R1S, R1V, R2, R2s, R3, R4, R5, R6, R7, R30, R40, R50, RR730, RR750
<b>Rollei</b>	Compactline 52, Compactline 55, Compactine 81, Compactine90, Compactine101, Compactine 102, Compactline 103, Compactine110, Compactline 122, Compactine200, Compactine 202, Compactline 203, Compactline 230, Compactine 302, compactline 312, Compactline 320, Compactine 350, Compactline 360TS, Compactline 390SE, Compactline 412, Compactline 415, Compactline 424, Compactline 425, da8, da70, da80, da81, da100, da101, da120, da800, da1325, da6325, da7535, da8325, da8535, dr135, dr835, Flexline140, Flexline200, Powerflex 440, Powerflex 450, Powerflex 460, Powerflex 455, Powerflex 470, Sportsline 50, Sportsline 60, Sportsline 60 le, XS10
<b>Samsung</b>	CL5, D75, D860, ES10, ES15, ES17, ES20, ES30, ES55, ES60, ES65, ES70, ES73, ES75, ES80, IT100, *M310, L60, L70, L77, L100, L201, L210, L301, L310W, L700, L730, L830, PL20, PL50, PL51, PL55, PL60, PL65, PL70, PL80, PL90, PL100, PL120, PL150, PL170, PL200, PL502, S760, S1070, SH100, SL50, SL102, SL202, SL600, SL620, SL720, SL820, ST30, ST45, ST50, ST60, ST65, ST70, ST80, ST90, ST95, ST500, ST550, ST700, TL205, TL210, TL220, TL225, TL320, TL350, WB100, WB1000, WB2000
<b>Sanyo</b>	DSC-E6, VPC-E7, VPC-E10, VPC-E60EX, VPC-E760, VPC-E870, VPC-E1000, VPC-E1075, VPC-E1090, VPC-E1290, VPC-S6, VPC-S7, VPC-S60EX, VPC-S70, VPC-S500, VPC-S600, VPC-S650, VPC-S670, VPC-S700, VPC-S750, VPC-S770, VPC-S870, VPC-S880, VPC-S1070, VPC-S1080, VPC-S1275, VPC-S1285, VPC-T700, VPC-T850, VPC-T1060, VPC-X1200, VPC-X1250, DSC-E7, DSC-S7, DSC-1200, DSC-X1250, DSC-X1260, VPC-W800
<b>Sony</b>	N1, N2, S650, S700, S730, S780, S930, S950, S980, S2000, S2100, WX1, WX7, WX9, WX10, W30, W35, W50, W55, W70, W80, W85, W90, W100, W110, W120, W130, W150, W170, W180, W190, W200, W210, W215, W220, W230, W270, W290, W300, W310, W320, W330, W350, W350D, W370, W380, W390, W510, W520, W530, W560, W570, W570D, WX1, WX5, WX9, WX10

<b>Yashica</b>	DC504, DC803, EZF10, EZF12W4XA, EZF12W4XL, EZF12W5XL, EZF524, EZF524MKII, EZF525, EZF527L, EZF531, EZF725, EZF824, EZF827, EZF924Z, EZF1027, EZF1027L, EZF1031, EZF1230, EZF1230L, EZF1231, EZF1233, EZ7032, EZ8032, EZF8035, EZF8321, EZTP-5, EZTP-9, EZTP-10, EZW-503A
----------------	--

 
## Seashell 2 Compatible Cameras

For unlisted cameras, please check fitting sheets, pages 4 – 7. \* Indicates that the Seashell will not have access to the power switch with that particular camera model.

<b>Company</b>	<b>Model</b>	<b>Note</b>
<b>Aigo</b>	V750, V790	
<b>Casio</b>	FS10, FS10S, M1, M2, M20, S1, S2, S3, S20, V7, V8	
<b>Fujifilm</b>	F800EXR, XP10, XP11, Z1, Z1 Zoom, Z2, Z2 Zoom, Z3, Z3 Zoom, Z5FD, Z10FD, Z20, Z20FD, Z100FD, Z30, Z31, Z33WP, Z35, Z37, Z70, Z71, Z80, Z81, Z90, Z91, Z100, Z200, Z200fd, Z250, Z250fd, Z300, Z700EXR, Z707, Z707EXR, Z800EXR, Z808EXR	
<b>GE</b>	G1, G2, G3WP, G5WP	
<b>Haier</b>	V805W	
<b>Hitachi</b>	HDC-W902	
<b>Kodak</b>	M590	
<b>Nikon</b>	S1, S2, S3, S5, S8, S9, S50, S50C, S51, S51C, S52, S52C, S60, S70, S80, S1000pj	
<b>Olympus</b>	TG310, TG610, TG-615, $\mu$ 550, $\mu$ 730, $\mu$ 790SW, $\mu$ 850, $\mu$ 850sw, $\mu$ 1030, $\mu$ 1030sw, $\mu$ 1040, $\mu$ 1050, $\mu$ 1050sw, $\mu$ 1070, $\mu$ TOUGH-3000, $\mu$ TOUGH-6000, $\mu$ TOUGH-6010, $\mu$ TOUGH-6020, $\mu$ TOUGH-8000, $\mu$ TOUGH-8010, $\mu$ 720sw, $\mu$ 725sw, $\mu$ 730sw, $\mu$ 770sw, $\mu$ 790sw, $\mu$ 795sw, $\mu$ 850SW, $\mu$ 1050SW	
<b>Panasonic</b>	FP1, FP2, FP3, FP8, FT1, FT2, *FT2SG-D, TS1, TS2	
<b>Pentax</b>	WS80	
<b>Praktica</b>	DMMC 4, DMMC,luxmedia 7403, DPix 5000WP	
<b>Rollei</b>	Sportline 90, X8	
<b>Samsung</b>	AQ100, CL5, i5, i6, i8, i50, i70, i85, i100, L83T, NV3, NV9, NV33, PL10, ST10, ST100, ST1000, SC-MS20, SC-MS25, VP-MS11, WP10	
<b>Sony</b>	J10, T1, T2, T3, T5, T7, T9, T10, T20, T30, T33, T50, T70, T77, T90, T99, T99D, T100, T110, T200, T300, T500, T700, T900, TX1, TX5, TX7, TX9, TX10, TX100V	
<b>Yashica</b>	DC318, DSC T68, EZ7033, EZF537IR, *EZ NV-1, EZUW-505	


# SS-1

## Fitting Sheet (Front View)

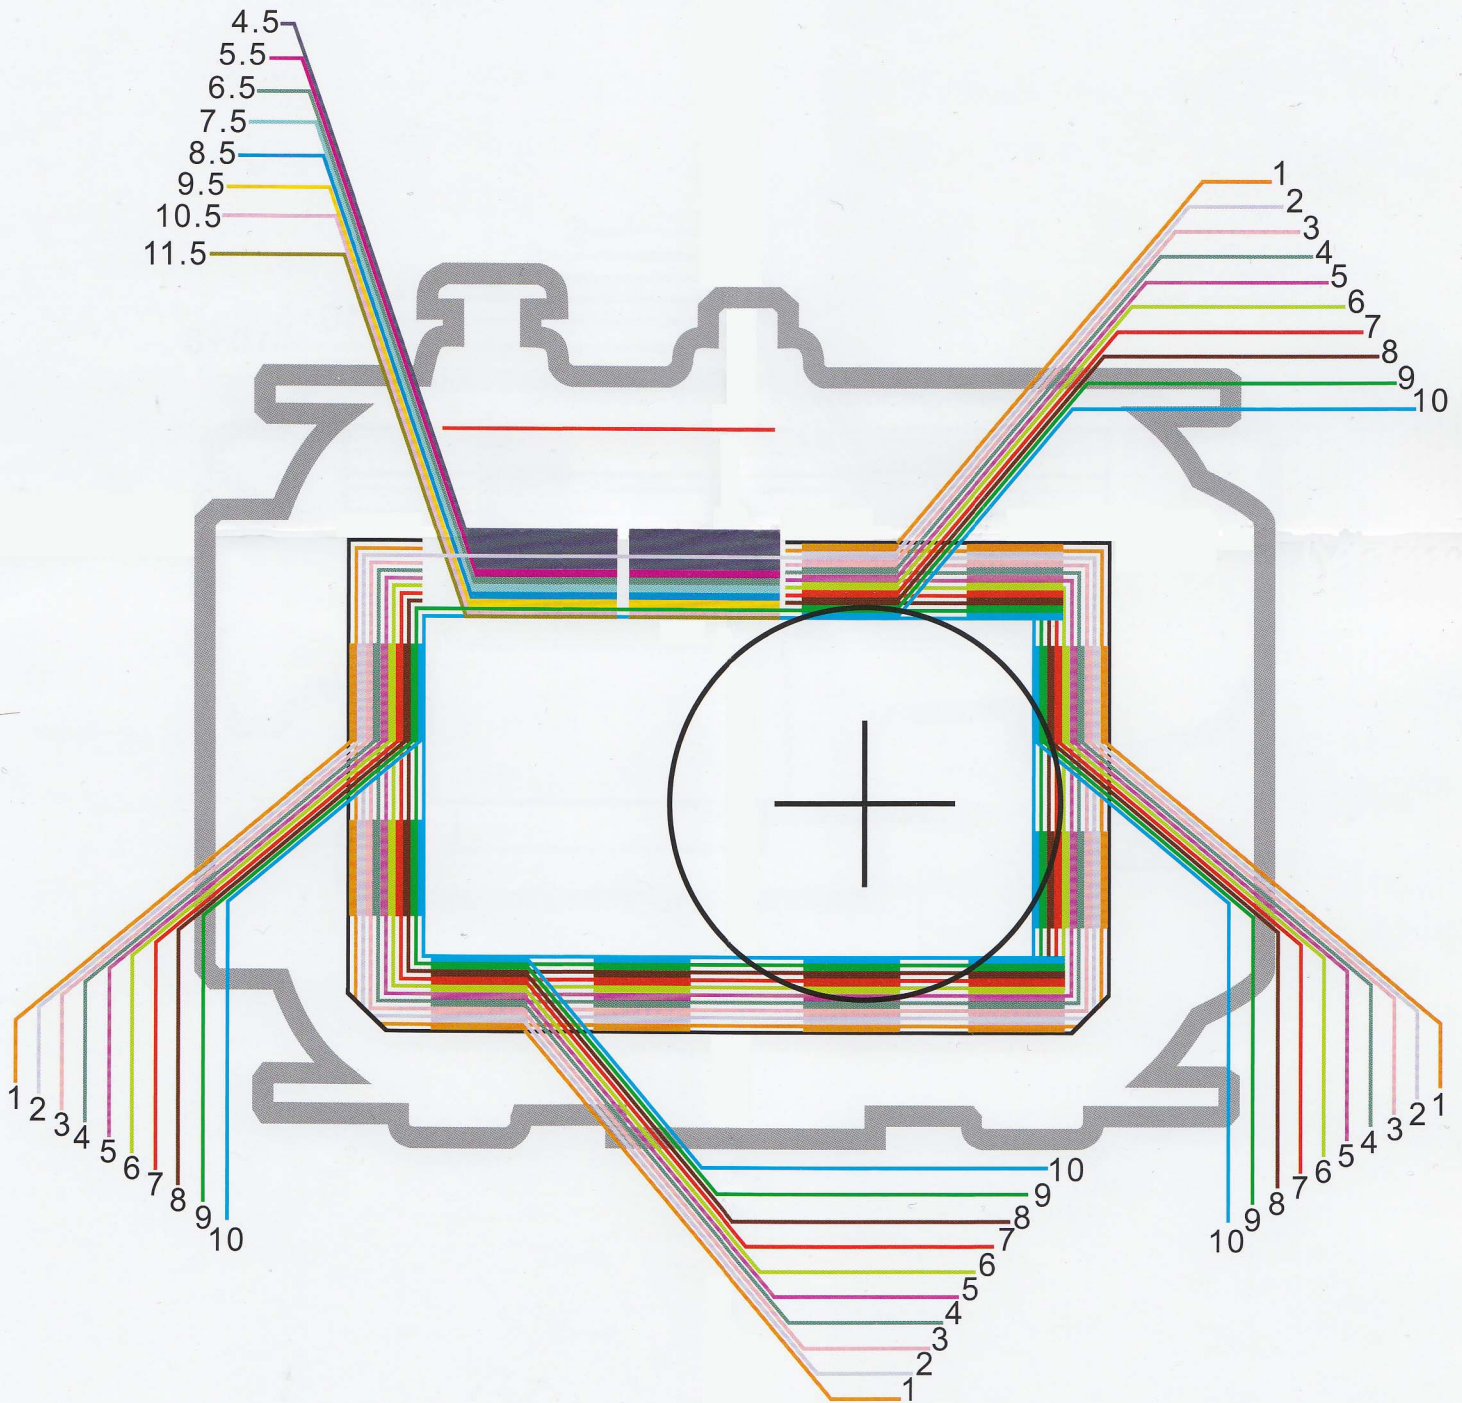


# SS-1
 
## Fitting Sheet (Top View)

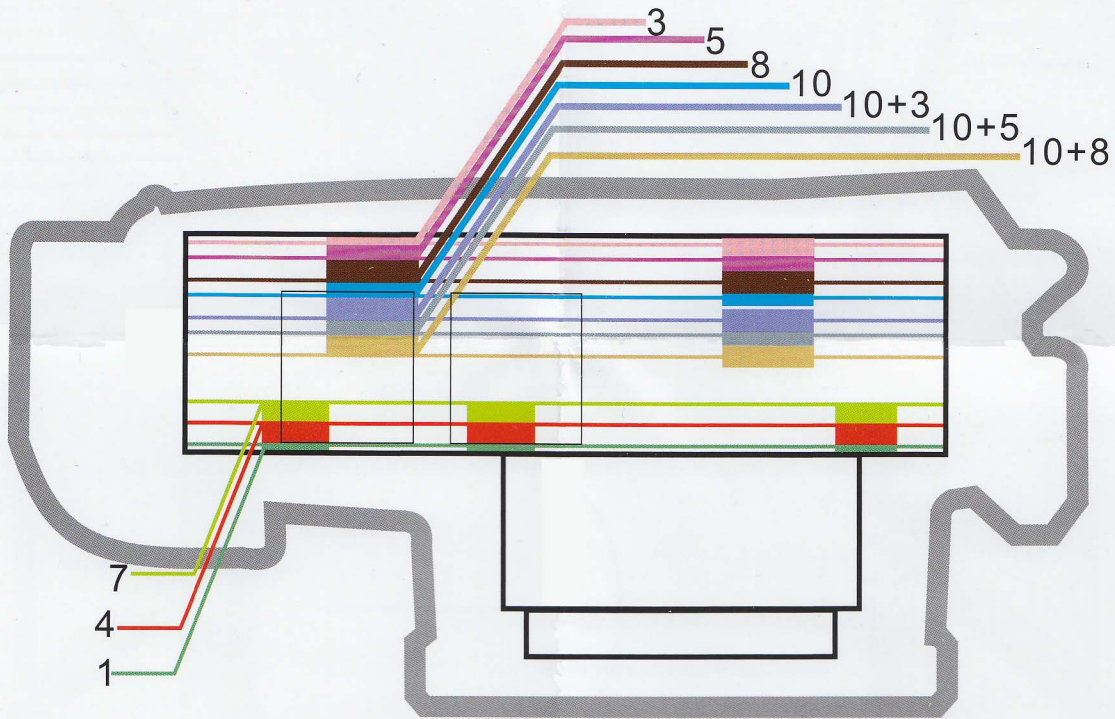

# SS-2
 
## Fitting Sheet (Front View)

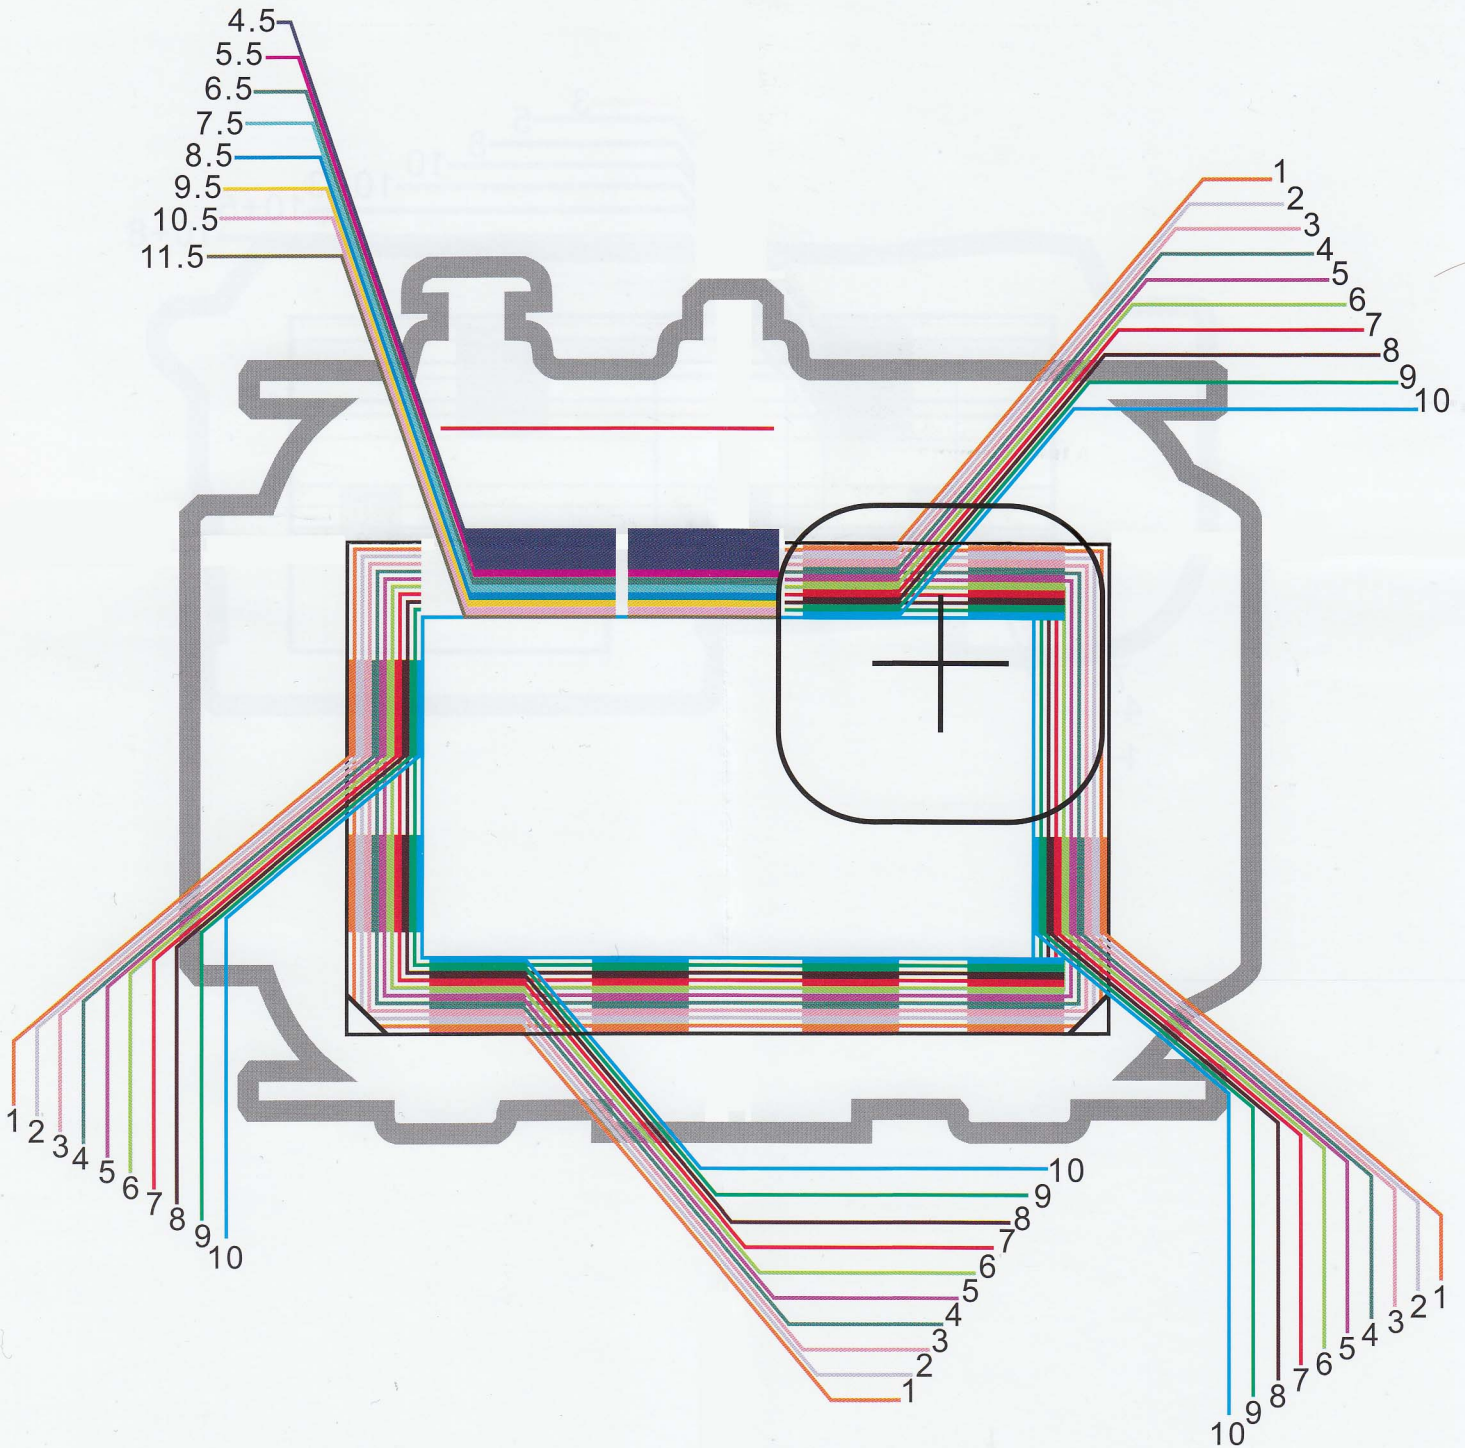

## SS-2

### Fitting Sheet (Top View)

