 


 
INON SYSTEM TABLE Attachment lens, strobe accessory compatibility table

[Compact Digital Camera - Lens]

Mfr.	Camera	Housing	Mount Base/Lens Adapter		Close-up Lens				Wide Lens (※12)						Super Wide Lens (※12)				
					28LD Lens	M67 Lens		AD Lens	28LD Lens	28M67 Lens		28AD Lens	M67 Lens		AD Lens	28LD Lens 28M67 Lens	M67 Lens 28AD Lens	AD Lens	
			Mount		UCL-165LD	UCL-330	UCL-165M67	UCL-165AD	UWL-H100 28LD	UWL-H100 28M67 Type1	UWL-H100 28M67 Type2	UWL-100 28AD	UWL-100 Type1	UWL-100 Type2	UWL-105AD	Dome Lens Unit II for UWL-H100	Dome Lens Unit II for UWL-100	UFL-165AD	
OLYMPUS	XZ-1	PT-050	—	—	—	□※11	□※11	—	—	□※5	—	—	—	—	—	—	■※5	—	—
	μ TOUGH-8010	PT-048	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
	μ TOUGH-6020	PT-048	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
	μ TOUGH-6000	PT-047	28AD	28AD Mount Base PT-045/047	—	—	—	■※10	—	—	—	—	—	—	—	—	—	—	—
	FE-3010	PT-046	AD	AD Mount Base PT-044/046	—	—	—	■	—	—	—	—	—	■	—	—	—	—	■
	μ TOUGH-8000	PT-045	28AD	28AD Mount Base PT-045/047	—	—	—	■※11	—	—	—	■	—	—	—	—	—	■※1※7	—
	FE-360	PT-044	AD	AD Mount Base PT-044/046	—	—	—	■	—	—	—	—	—	■	—	—	—	—	■
	μ 1030SW	PT-043	28AD	28AD Mount Base PT-043	—	—	—	■	—	—	—	—	■	—	—	—	—	■※1※7	—
	μ 1020	PT-042	M67	M67 Mount Base PT-42	—	■	■	—	—	—	—	—	■	■※3	—	—	—	■※6	—
	μ 850SW / μ 790SW	PT-041	AD	AD Mount Base PT-041	—	—	—	■	—	—	—	—	—	■	—	—	—	—	■
	μ 830 / μ 780	PT-039	M67	M67 Mount Base PT-034/039	—	■	■	—	—	—	—	—	■	■※3	—	—	—	■※6	—
	SP-560UZ / SP-550UZ	PT-037	—	—	—	—	■※13	■※13	—	—	—	—	—	—	—	—	—	—	—
	μ 760	PT-036	AD	AD Mount Base PT-032/036	—	—	—	■	—	—	—	—	—	■	—	—	—	—	■
	μ 795SW / μ 770SW	PT-035	AD	AD Mount Base PT-033/035	—	—	—	■	—	—	—	—	—	■	—	—	—	—	■
	μ 750	PT-034	M67	M67 Mount Base PT-034/039	—	■	■	—	—	—	—	—	■	■※3	—	—	—	■※6	—
	μ 725SW / μ 720SW	PT-033	AD	AD Mount Base PT-033/035	—	—	—	■	—	—	—	—	—	■	—	—	—	—	■
	μ 710	PT-032	AD	AD Mount Base PT-032/036	—	—	—	■	—	—	—	—	—	■	—	—	—	—	■
	SP-700	PT-031	AD	AD Mount Base PT-031	—	—	—	■	—	—	—	—	—	■	—	—	—	—	■
	SP-350	PT-030	AD	AD Mount Base PT-030	—	—	—	■	—	—	—	—	—	■	—	—	—	—	■
	μ 600	PT-029	AD	AD Mount Base PT-029	—	—	—	■	—	—	—	—	—	■	—	—	—	—	■
	C-7070WZ	PT-027	28AD	28AD Port PT-027/020	—	—	—	■※19	—	—	—	—	■※7	—	—	—	—	■※1※7	—
	μ -40	PT-026	AD	AD Mount Base PT-026	—	—	—	■	—	—	—	—	—	■	—	—	—	—	■
	X-3	PT-024	AD	AD Mount Base PT-024	—	—	—	■	—	—	—	—	—	■	—	—	—	—	■
	C-8080WZ	PT-023	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
	C-770UZ / C-760UZ	PT-022	—	—	—	—	□	□	—	—	—	—	—	—	—	—	—	—	—
	C-5060WZ	PT-027 PT-020	28AD	28AD Port PT-027/020	—	—	—	■※19	—	—	—	—	■※7	—	—	—	—	■※1※7	—
	C-755UZ / C-750UZ C-745UZ / C-740UZ	PT-018	—	—	—	—	□	□	—	—	—	—	—	—	—	—	—	—	—
	μ -30 / μ -25 / μ -20 / μ -15 / μ -10	PT-016	AD	AD Mount Base PT-016	—	—	—	■	—	—	—	—	—	■	—	—	—	—	■
	C-5050Z	PT-015	—	—	—	—	□	□	—	—	—	—	—	□	—	—	—	■※4	—
	X-2 / X-1	PT-014	AD	AD Mount Base PT-014	—	—	—	■	—	—	—	—	—	■	—	—	—	—	■
	C-40Z	PT-012	AD	AD Mount Base PT-014	—	■	■	—	—	—	—	—	■※3	■	—	—	—	■※6	—
			M67	M67 Mount Base PT-012	—	—	—	—	—	—	—	—	—	—	■	—	—	—	■
	C-4100Z	PT-010	—	—	—	□	□	—	—	—	—	—	□※2※4	—	—	—	—	■※5	—
C-4040Z	PT-010	—	—	—	□	□	—	—	—	—	—	□※2	□	—	—	—	■※4	—	
C-3040Z	PT-010	—	—	—	□	□	—	—	—	—	—	□※2	□	—	—	—	■※4	—	
		PT-007	—	—	—	□	□	—	—	—	—	—	□※2	□	—	—	—	■※4	
C-3030Z	PT-010	—	—	—	□	□	—	—	—	—	—	□※2※4	—	—	—	—	■※5	—	
		PT-007	—	—	—	□	□	—	—	—	—	—	□※2※4	—	—	—	■※5	—	
		PT-005	—	—	—	□	□	—	—	—	—	—	□※2	—	—	—	■※4	—	
C-3000Z	PT-010	—	—	—	□	□	—	—	—	—	—	□※2※4	—	—	—	—	■※5	—	
		PT-007	—	—	—	□	□	—	—	—	—	—	□※2※4	—	—	—	■※4	—	
C-2040Z	PT-010	—	—	—	□	□	—	—	—	—	—	□※2	□	—	—	—	■	—	
		PT-007	—	—	—	□	□	—	—	—	—	—	□※2	□	—	—	■	—	
C-2020Z	PT-010	—	—	—	□	□	—	—	—	—	—	□※2	□	—	—	—	■※6	—	
		PT-007	—	—	—	□	□	—	—	—	—	—	□※2	□	—	—	■※6	—	
		PT-005	—	—	—	□	□	—	—	—	—	—	□※2	—	—	—	■	—	
C-300Z / C-200Z	PT-009	AD	AD Mount Base PT-009	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	

 
< Remarks > ■ : Attached via Mount Base etc. □ : Directly attached on a housing ★ : Attachable ○ : Usable △ : Some operational limitation is applied — : Not compatible ▲ : To be confirmed × : Not usable

[Compact Digital Camera - Lens]

Mfr.	Camera	Housing	Mount Base/Lens Adapter		Close-up Lens				Wide Lens (※12)						Super Wide Lens (※12)			
					28LD Lens	M67 Lens		AD Lens	28LD Lens	28M67 Lens		28AD Lens	M67 Lens		AD Lens	28LD Lens 28M67 Lens	M67 Lens 28AD Lens	AD Lens
			Mount		UCL-165LD	UCL-330	UCL-165M67	UCL-165AD	UWL-H100 28LD	UWL-H100 28M67 Type1	UWL-H100 28M67 Type2	UWL-100 28AD	UWL-100 Type1	UWL-100 Type2	UWL-105AD	Dome Lens Unit II for UWL-H100	Dome Lens Unit II for UWL-100	UFL-165AD
Canon	IXY 200F	WP-DC36	28AD	28AD Mount Base DC36	—	—	—	■	—	—	—	■	—	—	—	—	■※1	—
	IXY D220IS	WP-DC33	28AD	28AD Mount Base DC33	—	—	—	—	—	—	—	■	—	—	—	—	■※1※7	—
	IXY D510IS	WP-DC32	28AD	28AD Mount Base DC32	—	—	—	■※11	—	—	—	■	—	—	—	—	■※1※7	—
	IXY D210IS	WP-DC31	AD	AD Mount Base DC31	—	—	—	■	—	—	—	—	—	■	—	—	—	■
	IXY D110IS	WP-DC29	AD	AD Mount Base DC29	—	—	—	■	—	—	—	—	—	■	—	—	—	■
	IXY D3000IS	WP-DC27	AD	AD Mount Base DC19/27	—	—	—	■	—	—	—	—	—	■	—	—	—	■
	IXY D920IS	WP-DC26	28AD	28AD Mount Base DC26	—	—	—	■	—	—	—	—	■	—	—	—	■※1	—
	IXY D95IS	WP-DC24	AD	AD Mount Base DC22/23/24	—	—	—	■	—	—	—	—	—	■	—	—	—	■
	IXY D25IS	WP-DC23	AD	AD Mount Base DC22/23/24	—	—	—	■	—	—	—	—	—	■	—	—	—	■
	IXY D20IS	WP-DC22	AD	AD Mount Base DC22/23/24	—	—	—	■	—	—	—	—	—	■	—	—	—	■
	IXY D2000IS	WP-DC19	AD	AD Mount Base DC19/27	—	—	—	■	—	—	—	—	—	■	—	—	—	■
	IXY D910IS	WP-DC17	28AD	28AD Mount Base DC17	—	—	—	■	—	—	—	—	■	—	—	—	■※1	—
	IXY D810IS	WP-DC15	AD	AD Mount Base DC5/15	—	—	—	■	—	—	—	—	—	■	—	—	—	■
	IXY D90	WP-DC14	AD	AD Mount Base DC3/4/13/14	—	—	—	■	—	—	—	—	—	■	—	—	—	■
	IXY D10	WP-DC13	AD	AD Mount Base DC3/4/13/14	—	—	—	■	—	—	—	—	—	■	—	—	—	■
	IXY D900IS	WP-DC9	28AD	28AD Mount Base DC9	—	—	—	■	—	—	—	—	—	■	—	—	■※1	—
	IXY D1000	WP-DC7	AD	AD Mount Base DC7	—	—	—	■	—	—	—	—	—	■	—	—	—	■
	IXY D800IS	WP-DC5	AD	AD Mount Base DC5/15	—	—	—	■	—	—	—	—	—	■	—	—	—	■
	IXY D70	WP-DC4	AD	AD Mount Base DC3/4/13/14	—	—	—	■	—	—	—	—	—	■	—	—	—	■
	IXY D80	WP-DC3	AD	AD Mount Base DC3/4/13/14	—	—	—	■	—	—	—	—	—	■	—	—	—	■
	IXY D700	WP-DC80	AD	AD Mount Base DC70/80	—	—	—	■	—	—	—	—	—	■	—	—	—	■
	IXY D600	WP-DC70	AD	AD Mount Base DC70/80	—	—	—	■	—	—	—	—	—	■	—	—	—	■
	IXY D500 / D450 / D400	WP-DC800	AD	AD Mount Base DC800	—	—	—	■	—	—	—	—	—	■	—	—	—	■
	IXY 300a	WP-DC500	AD	AD Mount Base DC100/500	—	—	—	■	—	—	—	—	—	■	—	—	—	■
			M67	M67 Mount Base DC100/500	—	—	■	■	—	—	—	—	■※3	■	—	—	■※6	—
	IXY 300	WP-DC100	AD	AD Mount Base DC100/500	—	—	—	■	—	—	—	—	—	■	—	—	—	■
			M67	M67 Mount Base DC100/500	—	—	■	■	—	—	—	—	■※3	■	—	—	■※6	—
	PowerShot S95	WP-DC38	28LD	28LD Mount Base DC38	■※11	■※18※21	■※18※21	■※19※21	■	—	—	—	—	—	—	■※7	—	—
	PowerShot S90	WP-DC35	28AD	28AD Mount Base DC35	—	—	—	■※11※20	—	—	—	—	—	—	—	—	■※1※7	—
	PowerShot G12 / G11	WP-DC34	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
	PowerShot G10	WP-DC28	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
	PowerShot A570IS	WP-DC12	AD	AD Mount Base DC12	—	—	—	■	—	—	—	—	—	■	—	—	—	■
	PowerShot A540	WP-DC2	AD	AD Mount Base DC2	—	—	—	■	—	—	—	—	—	■	—	—	—	■
	PowerShot S80	WP-DC1	28AD	28AD Mount Base DC1	—	—	—	■	—	—	—	—	—	■	—	—	■※1	—
	PowerShot A95	WP-DC50	AD	AD Mount Base DC900/50	—	—	—	■	—	—	—	—	—	■	—	—	—	■
	PowerShot S70 / S60	WP-DC40	28AD	28AD Mount Base DC40	—	—	—	■※20	—	—	—	—	—	■	—	—	■※1	—
	PowerShot A75 / A85	WP-DC30	AD	AD Mount Base DC700/30	—	—	—	■	—	—	—	—	—	■	—	■※9	—	■※9
	PowerShot S1 IS	WP-DC20	M67	M67 Mount Base DC20	—	■	■	—	—	—	—	—	■	■※3	—	—	■	—
	PowerShot A80	WP-DC900	AD	AD Mount Base DC900/50	—	—	—	■	—	—	—	—	—	■	—	—	—	■
	PowerShot A70 / A60	WP-DC700	AD	AD Mount Base DC700/30	—	—	—	■	—	—	—	—	—	■	—	■※9	—	■※9
PowerShot S50 / S45 / S40 / S30	WP-DC300	AD	AD Mount Base DC300	—	—	—	■	—	—	—	—	—	■	—	—	—	■	
		M67	M67 Mount Base DC300	—	—	■	■	—	—	—	—	■※3	■	—	—	■※6	—	
PowerShot A40 / A30	WP-DC200S	AD	AD Mount Base DC200/200S	—	—	—	■	—	—	—	—	—	■	—	—	—	■	
		M67	M67 Mount Base DC200/200S	—	—	■	■	—	—	—	—	■	■※3	—	—	■※6	—	
PowerShot A20 / A10	WP-DC200S WP-DC200	AD	AD Mount Base DC200/200S	—	—	—	■	—	—	—	—	—	■	—	—	—	■	
		M67	M67 Mount Base DC200/200S	—	—	■	■	—	—	—	—	■	■※3	—	—	■※6	—	

< Remarks > ■ : Attached via Mount Base etc. □ : Directly attached on a housing ★ : Attachable ○ : Usable △ : Some operational limitation is applied — : Not compatible ▲ : To be confirmed × : Not usable

[Compact Digital Camera - Lens]

Mfr.	Camera	Housing	Mount Base/Lens Adapter		Close-up Lens				Wide Lens (※12)						Super Wide Lens (※12)				
					28LD Lens	M67 Lens		AD Lens	28LD Lens	28M67 Lens		28AD Lens	M67 Lens		AD Lens	28LD Lens 28M67 Lens	M67 Lens 28AD Lens	AD Lens	
			Mount		UCL-165LD	UCL-330	UCL-165M67	UCL-165AD	UWL-H100 28LD	UWL-H100 28M67 Type1	UWL-H100 28M67 Type2	UWL-100 28AD	UWL-100 Type1	UWL-100 Type2	UWL-105AD	Dome Lens Unit II for UWL-H100	Dome Lens Unit II for UWL-100	UFL-165AD	
Panasonic	LUMIX FT3	MCFT3	28LD	28LD Mount Base MCFT3	■※11	■※18※21	■※18※21	■※19※21	■	—	—	—	—	—	—	—	■※7	—	—
	LUMIX FT2	MCFT2	28AD	28AD Mount Base MCFT2	—	—	—	■※11※20	—	—	—	■	—	—	—	—	—	■※1※7	—
	LUMIX FT1	MCFT1	28AD	28AD Mount Base MCFT1	—	—	—	■※11※20	—	—	—	■※7	—	—	—	—	—	■※1※7	—
	LUMIX ZX3	MCZX3	M67	M67 Lens Adapter Base MCZX3/ZX1	—	■※15	■※15	—	—	—	—	—	—	—	—	—	—	—	—
	LUMIX ZX1	MCZX3 MCZX1	M67	M67 Lens Adapter Base MCZX3/ZX1	—	■※15	■※15	—	—	—	—	—	—	—	—	—	—	—	—
	LUMIX FX40	MCFX40	28AD	28AD Mount Base MCFSS/FX35/FX40	—	—	—	■※11	—	—	—	—	—	—	—	—	—	—	—
	LUMIX FX37 / FX35	MCFX35	28AD	28AD Mount Base MCFSS/FX35/FX40	—	—	—	■※11	—	—	—	—	—	—	—	—	—	—	—
	LUMIX FX33 / FX30	MCFX30	28AD	28AD/AD Mount Base MCFX01/07/30	—	—	—	■	—	—	—	■	—	—	—	—	—	■※1※7	—
	LUMIX FX07 / FX01	MCFX07 MCFX01	28AD	28AD/AD Mount Base MCFX01/07/30	—	—	—	■	—	—	—	■	—	—	—	—	—	■※1※7	—
	LUMIX FS3	MCFSS	28AD	28AD Mount Base MCFSS/FX35/FX40	—	—	—	■	—	—	—	■	—	—	—	—	—	■※1※7	—
	LUMIX FS2 / FS1	MCFX07	AD	28AD/AD Mount Base MCFX01/07/30	—	—	—	■	—	—	—	—	—	■	—	—	—	—	■
	LUMIX TZ20	MCTZ20	M67	M67 Lens Adapter Base MCTZ20 ※17	—	■※15※17	■※15※17	—	—	—	—	—	—	—	—	—	—	—	—
	LUMIX TZ10	MCTZ10	M67	M67 Lens Adapter Base MCTZ10 ※16	—	■※15※16	■※15※16	—	—	—	—	—	—	—	—	—	—	—	—
	LUMIX TZ7	MCTZ7	M67	M67 Lens Adapter Base MCTZ7/TZ5 ※16	—	■※15※16	■※15※16	—	—	—	—	—	—	—	—	—	—	—	—
LUMIX TZ5	MCTZ5	M67	M67 Lens Adapter Base MCTZ7/TZ5	—	■※15	■※15	—	—	—	—	—	—	—	—	—	—	—	—	
LUMIX TZ3	MCTZ3	—	—	—	■※8	■※8	—	—	—	—	—	—	—	—	—	—	—	—	
FUJIFILM	FinePix F80EXR	WP-FXF80	M67	M67 Lens Adapter Base FXF80	—	■※15	■※15	—	—	—	—	—	—	—	—	—	—	—	—
	FinePix Z100fd / Z200fd / Z250fd	WP-FXZ100	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
	FinePix F200EXR	WP-FXF200	M67	M67 Lens Adapter Base FXF200	—	■※15	■※15	—	—	—	—	—	—	—	—	—	—	—	—
	FinePix F100fd	WP-FXF100	M67	M67 Lens Adapter Base FXF200	—	■※15	■※15	—	—	—	—	—	—	—	—	—	—	—	—
	FinePix F50fd	WP-FXF50	AD	AD Mount Base FXF50	—	—	—	■	—	—	—	—	—	■	—	—	—	—	■
	FinePix F40fd	WP-FXF40	AD	AD Mount Base FXF40	—	—	—	■	—	—	—	—	—	■	—	—	—	—	■
	FinePix F31fd / F30	WP-FXF30	AD	AD Mount Base FXF30	—	—	—	■	—	—	—	—	—	■	—	—	—	—	■
	FinePix F11 / F10	WP-FXF10	AD	AD Mount Base FXF10	—	—	—	■	—	—	—	—	—	■	—	—	—	—	■
FinePix F810 / F710	WP-FX701	AD	AD Mount Base FX701	—	—	—	■	—	—	—	—	—	■	—	—	—	—	■※9	
SONY	T90	MPK-THGB	AD	AD Mount Base THG/THGB	—	—	—	■	—	—	—	—	—	—	—	—	—	—	—
	T700	MPK-THGB MPK-THG	AD	AD Mount Base THG/THGB	—	—	—	■	—	—	—	—	—	■	—	—	—	—	■
	T77	MPK-THGB MPK-THG	AD	AD Mount Base THG/THGB	—	—	—	■	—	—	—	—	—	■	—	—	—	—	■※9
	W300	MPK-WD	M67	M67 Mount Base WD	—	■	■	—	—	—	—	—	—	■	■※3	—	—	—	■※6
	W170	MPK-WD	M67	M67 Mount Base WD ※11	—	■※11	■※11	—	—	—	—	—	—	—	—	—	—	—	—
	W7 / W5 / W1	MPK-WA	AD	AD Mount Base WA	—	—	—	■	—	—	—	—	—	■	—	—	—	—	■
	N2 / N1	MPK-NA	AD	AD Mount Base NA	—	—	—	■	—	—	—	—	—	■	—	—	—	—	■
	P100 / P150	MPK-PHB	AD	AD Mount Base PHB	—	—	—	■	—	—	—	—	—	■	—	—	—	—	■
Nikon	E7900 / E5900	WP-CP4	AD	AD Mount Base CP4/2	—	—	—	■	—	—	—	—	—	—	—	■	—	—	■
	E5200 / E4200	WP-CP2	AD	AD Mount Base CP4/2	—	—	—	■	—	—	—	—	—	■	—	—	—	—	■
	E4100 / E3200 / E2200	WP-CP1	AD	AD Mount Base CP1	—	—	—	■	—	—	—	—	—	■	—	—	—	—	■

< Remarks > ■ : Attached via Mount Base etc. □ : Directly attached on a housing ★ : Attachable ○ : Usable △ : Some operational limitation is applied — : Not compatible ▲ : To be confirmed × : Not usable

[Compact Digital Camera - Strobe]

Accessories for Z-240 / D-2000 / S-2000 strobe																
Mfr.	Camera	Housing	Shoe Base	Connection method	Wireless compatibility				"Optical D Cable" product compatibility				Compatible flash mode			
					When using Grip Base D4 Set		When using Shoe Base Set		When using Grip Base D4		When using Shoe Base		Location to attach "Optical D Cable" product	S-TTL Auto	External Auto (*A)	Manual
					without Mount Base	with Mount Base	without Mount Base	with Mount Base	without Mount Base	with Mount Base	without Mount Base	with Mount Base				
OLYMPUS	XZ-1	PT-050	★	Optical	×※X	—	×※X	—	Optical D Cable Type L/Bush W55 Set	Optical D Cable SS Type L/Bush W55 Set	Housing Holder Unit Connector	○※H※L※M	○※L※N	○※L※N		
	μ TOUGH-8010	PT-048	★	Optical	○	—	○	—	Optical D Cable Type L/Double Hole Rubber Bush Set	Optical D Cable SS Type L/Double Hole Rubber Bush Set	Housing Fiber Optics Adapter	○※C※L	○※B※L	○※L		
	μ TOUGH-6020	PT-048	★	Optical	○	—	○	—	Optical D Cable Type L/Double Hole Rubber Bush Set	Optical D Cable SS Type L/Double Hole Rubber Bush Set	Housing Fiber Optics Adapter	○	○※B	○		
	μ TOUGH-6000	PT-047	★	Optical	—	×※VI	—	○	Optical D Cable Type L/Cap W48 Set	Optical D Cable SS Type L/Cap W48 Set	Mount Base	○	○※B	○		
	FE-3010	PT-046	—	Optical	○	○	—	—	Optical D Cable Type L/Double Hole Rubber Bush Set ※J	Optical D Cable SS Type L/Double Hole Rubber Bush Set ※J	Housing Fiber Optics Adapter	○	○※B	○		
	μ TOUGH-8000	PT-045	★	Optical	—	×※VI	—	○	Optical D Cable Type L/Cap W48 Set	Optical D Cable SS Type L/Cap W48 Set	Mount Base	○	○※B	○		
	FE-360	PT-044	—	Optical	○※XII	○※XII	—	—	Optical D Cable Type L/Double Hole Rubber Bush Set ※J	Optical D Cable SS Type L/Double Hole Rubber Bush Set ※J	Housing Fiber Optics Adapter	○	△※B※E	△※E		
	μ 1030SW	PT-043	★	Optical	○	×※VI	○	○	Optical D Cable Type L/Cap W42 Set	Optical D Cable SS Type L/Cap W42 Set	Housing Diffuser Panel	○	○※B	○		
	μ 1020	PT-042	★	Optical	○	○	○	○	Optical D Cable Type L/Cap W32 Set	Optical D Cable SS Type L/Cap W32 Set	Mount Base	○	○※B	○		
	μ 850SW / μ 790SW	PT-041	★	Optical	○	×※VI	○	○	Optical D Cable Type L/Cap W42 Set	Optical D Cable SS Type L/Cap W42 Set	Housing Diffuser Panel	○	○※B	○		
	μ 830 / μ 780	PT-039	★	Optical	△※VI	△※VII	△※VI	△※VII	Optical D Cable Type L/Cap W32 Set	Optical D Cable SS Type L/Cap W32 Set	Mount Base	○	○※B	○		
	SP-560UZ / SP-550UZ	PT-037	★	Optical	○	—	○	—	Optical D Cable Type L/Cap W37 Set ※I	—	Housing Diffuser Panel	○※C	○	○		
	μ 760	PT-036	★	Optical	○	○	○	○	Optical D Cable Type L/Cap W7 Set	Optical D Cable Type L/Cap W7 Set	Housing Accessory Shoe	○	○※B	○		
	μ 795SW / μ 770SW	PT-035	★	Optical	○	×※VI	○	○	Optical D Cable Type L/Cap W42 Set	Optical D Cable SS Type L/Cap W42 Set	Housing Diffuser Panel	○	○※B	○		
	μ 750	PT-034	★	Optical	△※VI	△※VII	△※VI	△※VII	Optical D Cable Type L/Cap W32 Set	Optical D Cable SS Type L/Cap W32 Set	Mount Base	○	○※B	○		
	μ 725SW / μ 720SW	PT-033	★	Optical	○	×※VI	○	○	Optical D Cable Type L/Cap W42 Set	Optical D Cable SS Type L/Cap W42 Set	Housing Diffuser Panel	○	○※B	○		
	μ 710	PT-032	—	Optical	○	○	—	—	Optical D Cable Type L/Cap W7 Set	—	Mount Base	○	○※B	○		
	SP-700	PT-031	—	Optical	○	○	—	—	Optical D Cable Type L/Cap W21 Set	—	Housing Diffuser Panel	○	○※B	○		
	SP-350	PT-030	★	Optical	○	○	○	○	Optical D Cable Type L/Cap W20 Set	Optical D Cable Type L/Cap W20 Set	Mount Base	○※C	○	○		
	μ 600	PT-029	★	Optical	○	○	○	○	Optical D Cable Type L/Cap W19 Set	Optical D Cable Type L/Cap W19 Set	Housing Diffuser Panel	○	○※B	○		
	C-7070WZ	PT-027	—	Optical	○	○	—	—	Optical D Cable Type L/Cap W9 Set	—	Mount Base	○※C	○	○		
	μ -40	PT-026	—	Optical	○	○	—	—	Optical D Cable Type L/Cap W18 Set	—	Housing Diffuser Panel	○	○※B	○		
	X-3	PT-024	—	Optical	○	○	—	—	Optical D Cable Type L/Cap W15 Set	—	Housing Diffuser Panel	○	○	○		
	C-8080WZ	PT-023	—	Optical	×※IV	—	—	—	Optical D Cable Type L/Cap W16 Set	—	Housing Accessory Shoe	○※C	○	○		
	C-770UZ / C-760UZ	PT-022	—	Optical	○	—	—	—	Optical D Cable Type L/Cap W10 Set	—	Housing Diffuser Panel	○	○	○		
	C-5060WZ	PT-027 PT-020	—	Optical	○	○	—	—	Optical D Cable Type L/Cap W9 Set	—	Housing Diffuser Panel	○※C	○	○		
	C-755UZ / C-750UZ C-745UZ / C-740UZ	PT-018	—	Optical	○	—	—	—	Optical D Cable Type L/Cap W7 Set	—	Housing Diffuser Panel	○	○	○		
	μ -30 / μ -25 / μ -20 / μ -15 / μ -10	PT-016	—	Optical	○	○	—	—	Optical D Cable Type L/Cap W8 Set	—	Housing Diffuser Panel	○	○※B	○		
	C-5050Z	PT-015	—	Optical	○	○	—	—	Optical D Cable Type L/Cap W18 Set	—	Housing Diffuser Panel	○※C	○	○		
	X-2 / X-1	PT-014	—	Optical	○	○	—	—	Optical D Cable Type L/Cap W6 Set	—	Mount Base	○	○	○		
	C-40Z	PT-012	—	Optical	○	○	—	—	Optical D Cable Type L/Cap W4 Set	—	Mount Base	○	○	○		
	C-4100Z	PT-010	—	Optical	△※I	—	—	—	Optical D Cable Type L/Cap W2 Set	—	Housing Diffuser Panel	○	○	○		
	C-4040Z	PT-010	—	Optical	△※I	—	—	—	Optical D Cable Type L/Cap W2 Set	—	Housing Diffuser Panel	○	○	○		
	C-3040Z	PT-010	—	Optical	△※I	—	—	—	Optical D Cable Type L/Cap W2 Set	—	Housing Diffuser Panel	○	○	○		
	C-3030Z	PT-007	—	Optical	△※I	—	—	—	Optical D Cable Type L/Cap W2 Set	—	Housing Diffuser Panel	○	○	○		
		PT-010	—	Optical	△※I	—	—	—	Optical D Cable Type L/Cap W2 Set	—	Housing Diffuser Panel	○	○	○		
		PT-005	—	Optical	△※I	—	—	—	Optical D Cable Type L/Cap W2 Set	—	Cap W2 Holder Spacer	○	○	○		
	C-3000Z	PT-010	—	Optical	△※I	—	—	—	Optical D Cable Type L/Cap W2 Set	—	Housing Diffuser Panel	○	○	○		
		PT-007	—	Optical	△※I	—	—	—	Optical D Cable Type L/Cap W2 Set	—	Housing Diffuser Panel	○	○	○		
		PT-005	—	Optical	△※I	—	—	—	Optical D Cable Type L/Cap W2 Set	—	Cap W2 Holder Spacer	○	○	○		
C-2040Z	PT-010	—	Optical	△※I	—	—	—	Optical D Cable Type L/Cap W2 Set	—	Housing Diffuser Panel	○	○	○			
	PT-007	—	Optical	△※I	—	—	—	Optical D Cable Type L/Cap W2 Set	—	Housing Diffuser Panel	○	○	○			
	PT-010	—	Optical	△※I	—	—	—	Optical D Cable Type L/Cap W2 Set	—	Housing Diffuser Panel	○	○	○			
C-2020Z	PT-010	—	Optical	△※I	—	—	—	Optical D Cable Type L/Cap W2 Set	—	Housing Diffuser Panel	○	○	○			
	PT-007	—	Optical	△※I	—	—	—	Optical D Cable Type L/Cap W2 Set	—	Housing Diffuser Panel	○	○	○			
	PT-005	—	Optical	△※I	—	—	—	Optical D Cable Type L/Cap W2 Set	—	Cap W2 Holder Spacer	○	○	○			
C-300Z / C-200Z	PT-009	—	Optical	○	○	—	—	Optical D Cable Type L/Cap W4 Set	—	Mount Base	○	○※B	○			

< Remarks > ■ : Attached via Mount Base etc. □ : Directly attached on a housing ★ : Attachable ○ : Usable △ : Some operational limitation is applied — : Not compatible ▲ : To be confirmed × : Not usable

[Compact Digital Camera - Strobe]

Accessories for Z-240 / D-2000 / S-2000 strobe																
Mfr.	Camera	Housing	Shoe Base	Connection method	Wireless compatibility				"Optical D Cable" product compatibility				Compatible flash mode			
					When using Grip Base D4 Set		When using Shoe Base Set		When using Grip Base D4		When using Shoe Base		Location to attach "Optical D Cable" product	S-TTL Auto	External Auto (※A)	Manual
					without Mount Base	with Mount Base	without Mount Base	with Mount Base	without Mount Base	with Mount Base	without Mount Base	with Mount Base				
Canon	IXY 200F	WP-DC36	—	Optical	○	×	—	—	Optical D Cable Type L/Cap W45 Set	—	Mount Base	○	○※B	○		
	IXY D220IS	WP-DC33	—	Optical	○	○	—	—	Optical D Cable Type L/Cap W45 Set	—	Mount Base	○	○※B	○		
	IXY D510IS	WP-DC32	—	Optical	○	○	—	—	Optical D Cable Type L/Cap W50 Set	—	Mount Base	○	○※B	○		
	IXY D210IS	WP-DC31	—	Optical	○	○	—	—	Optical D Cable Type L/Cap W49 Set	—	Mount Base	○	○※B	○		
	IXY D110IS	WP-DC29	—	Optical	○	○	—	—	Optical D Cable Type L/Cap W30 Set	—	Mount Base	○	○※B	○		
	IXY D3000IS	WP-DC27	—	Optical	○	○	—	—	Optical D Cable Type L/Cap W44 Set	—	Mount Base	○※D	○	○		
	IXY D920IS	WP-DC26	—	Optical	○	○	—	—	Optical D Cable Type L/Cap W45 Set	—	Mount Base	○	○※B	○		
	IXY D95IS	WP-DC24	—	Optical	○	○	—	—	Optical D Cable Type L/Cap W30 Set	—	Mount Base	○	○※B	○		
	IXY D25IS	WP-DC23	—	Optical	○	○	—	—	Optical D Cable Type L/Cap W30 Set	—	Mount Base	○	○※B	○		
	IXY D20IS	WP-DC22	—	Optical	○	○	—	—	Optical D Cable Type L/Cap W30 Set	—	Mount Base	○	○※B	○		
	IXY D2000IS	WP-DC19	—	Optical	○	○	—	—	Optical D Cable Type L/Cap W27 Set	—	Mount Base	○	○※B	○		
	IXY D910IS	WP-DC17	—	Optical	○	○	—	—	Optical D Cable Type L/Cap W3 Set	—	Mount Base	○	○※B	○		
	IXY D810IS	WP-DC15	—	Optical	×※IV	×※IV	—	—	Optical D Cable Type L/Cap W31 Set	—	Mount Base	○	○※B	○		
	IXY D90	WP-DC14	—	Optical	○	○	—	—	Optical D Cable Type L/Cap W30 Set	—	Mount Base	○	○※B	○		
	IXY D10	WP-DC13	—	Optical	○	○	—	—	Optical D Cable Type L/Cap W30 Set	—	Mount Base	○	○※B	○		
	IXY D900IS	WP-DC9	—	Optical	○	○	—	—	Optical D Cable Type L/Cap W33 Set	—	Mount Base	○	○※B	○		
	IXY D1000	WP-DC7	—	Optical	○	○	—	—	Optical D Cable Type L/Cap W27 Set	—	Mount Base	○	○※B	○		
	IXY D800IS	WP-DC5	—	Optical	×※IV	×※IV	—	—	Optical D Cable Type L/Cap W31 Set	—	Mount Base	○	○※B	○		
	IXY D70	WP-DC4	—	Optical	○	○	—	—	Optical D Cable Type L/Cap W30 Set	—	Mount Base	○	○※B	○		
	IXY D80	WP-DC3	—	Optical	○	○	—	—	Optical D Cable Type L/Cap W30 Set	—	Mount Base	○	○※B	○		
	IXY D700	WP-DC80	—	Optical	○	○	—	—	Optical D Cable Type L/Cap W22 Set	—	Mount Base	○	○※B	○		
	IXY D600	WP-DC70	—	Optical	○	○	—	—	Optical D Cable Type L/Cap W22 Set	—	Mount Base	○	○※B	○		
	IXY D500 / D450 / D400	WP-DC800	—	Optical	○	○	—	—	Optical D Cable Type L/Cap W3 Set	—	Mount Base	○	○※B	○		
	IXY 300a	WP-DC500	—	Optical	○	○	—	—	Optical D Cable Type L/Cap W3 Set	—	Mount Base	○	○※B	○		
	IXY 300	WP-DC100	—	Optical	○	○	—	—	Optical D Cable Type L/Cap W3 Set	—	Mount Base	○	○※B	○		
	PowerShot S95	WP-DC38	★※XII	Optical	○	○	—	○※XII	Optical D Cable Type L/Cap W51 Set	Optical D Cable SS Type L/Cap W51 Set	Mount Base	○※D※H	○	○		
	PowerShot S90	WP-DC35	★※XII	Optical	○	○	—	○※XII	Optical D Cable Type L/Cap W51 Set	Optical D Cable SS Type L/Cap W51 Set	Mount Base	○※D※H	○	○		
	PowerShot G12 / G11	WP-DC34	—	Optical	○	—	—	—	Optical D Cable Type L/Cap W54 Set	—	Housing Strap Eyelet	○※D※H	○	○		
	PowerShot G10	WP-DC28	—	Optical	○	—	—	—	Optical D Cable Type L/Cap W53 Set	—	Housing Strap Eyelet	○※D※H	○	○		
	PowerShot A570IS	WP-DC12	—	Optical	○	○	—	—	Optical D Cable Type L/Cap W36 Set	—	Mount Base	○※D	○	○		
	PowerShot A540	WP-DC2	—	Optical	○	○	—	—	Optical D Cable Type L/Cap W29 Set	—	Mount Base	○※D	○	○		
	PowerShot S80	WP-DC1	—	Optical	○	○	—	—	Optical D Cable Type L/Cap W23 Set	—	Mount Base	○※D	○	○		
	PowerShot A95	WP-DC50	—	Optical	○	○	—	—	Optical D Cable Type L/Cap W3 Set	—	Mount Base	○※D	○	○		
	PowerShot S70 / S60	WP-DC40	—	Optical	○	○	—	—	Optical D Cable Type L/Cap W23 Set	—	Mount Base	○※D	○	○		
	PowerShot A85 / A75	WP-DC30	—	Optical	○	○	—	—	Optical D Cable Type L/Cap W3 Set	—	Mount Base	○※D	○	○		
	PowerShot S1 IS	WP-DC20	—	Optical	○	○	—	—	Optical D Cable Type L/Cap W18 Set	—	Mount Base	○※D	○	○		
	PowerShot A80	WP-DC900	—	Optical	○	○	—	—	Optical D Cable Type L/Cap W3 Set	—	Mount Base	○※D	○	○		
	PowerShot A70 / A60	WP-DC700	—	Optical	○	○	—	—	Optical D Cable Type L/Cap W3 Set	—	Mount Base	○※D	○	○		
	PowerShot S50 / S45 / S40 / S30	WP-DC300	—	Optical	○	○	—	—	Optical D Cable Type L/Cap W3 Set	—	Mount Base	○※D	○	○		
	PowerShot A40 / A30	WP-DC200S	—	Optical	○	○	—	—	Optical D Cable Type L/Cap W3 Set	—	Mount Base	○※D	○	○		
	PowerShot A20 / A10	WP-DC200S WP-DC200	—	Optical	○	○	—	—	Optical D Cable Type L/Cap W3 Set	—	Mount Base	○	○※B	○		

< Remarks > ■ : Attached via Mount Base etc. □ : Directly attached on a housing ★ : Attachable ○ : Usable △ : Some operational limitation is applied — : Not compatible ▲ : To be confirmed × : Not usable

[Compact Digital Camera - Strobe]

Accessories for Z-240 / D-2000 / S-2000 strobe																
Mfr.	Camera	Housing	Shoe Base	Connection method	Wireless compatibility				"Optical D Cable" product compatibility				Compatible flash mode			
					When using Grip Base D4 Set		When using Shoe Base Set		When using Grip Base D4		When using Shoe Base		Location to attach "Optical D Cable" product	S-TTL Auto	External Auto (※A)	Manual
					without Mount Base	with Mount Base	without Mount Base	with Mount Base	without Mount Base	with Mount Base	without Mount Base	with Mount Base				
Panasonic	LUMIX FT3	MCFT3	★	Optical	○	×※VI	○	○	Optical D Cable Type L/Cap W35 Set	Optical D Cable SS Type L/Cap W35 Set	Housing Holder Unit Connector	○	○※B	○		
	LUMIX FT2	MCFT2	★	Optical	○	×※VI	○	○	Optical D Cable Type L/Cap W35 Set	Optical D Cable SS Type L/Cap W35 Set	Housing Holder Unit Connector	○	○※B	○		
	LUMIX FT1	MCFT1	★	Optical	○	×※VI	○	○	Optical D Cable Type L/Cap W35 Set	Optical D Cable SS Type L/Cap W35 Set	Housing Holder Unit Connector	○	○※B	○		
	LUMIX ZX3	MCZX3	★	Optical	○	○	○	○	Optical D Cable Type L/Cap W35 Set	Optical D Cable SS Type L/Cap W35 Set	Housing Holder Unit Connector	○	○※B	○		
	LUMIX ZX1	MCZX3 MCZX1	★	Optical	○	○	○	○	Optical D Cable Type L/Cap W35 Set	Optical D Cable SS Type L/Cap W35 Set	Housing Holder Unit Connector	○	○※B	○		
	LUMIX FX40	MCFX40	★	Optical	○	○	○	○	Optical D Cable Type L/Cap W35 Set	Optical D Cable SS Type L/Cap W35 Set	Housing Holder Unit Connector	○	○※B	○		
	LUMIX FX37 / FX35	MCFX35	★	Optical	○	○	○	○	Optical D Cable Type L/Cap W35 Set	Optical D Cable SS Type L/Cap W35 Set	Housing Holder Unit Connector	○	○※B	○		
	LUMIX FX33 / FX30	MCFX30	—	Optical	○	○	—	—	Optical D Cable Type L/Cap W35 Set	—	Housing Holder Unit Connector	○	○※B	○		
	LUMIX FX07 / FX01	MCFX07 MCFX01	—	Optical	○	○	—	—	Optical D Cable Type L/Cap W26 Set	—	Mount Base	○	○※B	○		
	LUMIX FS3	MCF55	★	Optical	○	○	○	○	Optical D Cable Type L/Cap W35 Set	Optical D Cable SS Type L/Cap W35 Set	Housing Holder Unit Connector	○	○※B	○		
	LUMIX FS2 / FS1	MCFX07	—	Optical	○	○	—	—	Optical D Cable Type L/Cap W26 Set	—	Mount Base	○	○※B	○		
	LUMIX TZ20	MCTZ20	★	Optical	○	○	○	○	Optical D Cable Type L/Cap W35 Set	Optical D Cable SS Type L/Cap W35 Set	Housing Holder Unit Connector	○	○	○		
	LUMIX TZ10	MCTZ10	★	Optical	○	○	○	○	Optical D Cable Type L/Cap W35 Set	Optical D Cable SS Type L/Cap W35 Set	Housing Holder Unit Connector	○	○	○		
	LUMIX TZ7	MCTZ7	★	Optical	○	○	○	○	Optical D Cable Type L/Cap W35 Set	Optical D Cable SS Type L/Cap W35 Set	Housing Holder Unit Connector	○	○※B	○		
	LUMIX TZ5	MCTZ5	★	Optical	○	○	○	○	Optical D Cable Type L/Cap W35 Set	Optical D Cable SS Type L/Cap W35 Set	Housing Holder Unit Connector	○	○※B	○		
LUMIX TZ3	MCTZ3	—	Optical	○	—	—	—	Optical D Cable Type L/Cap W35 Set	—	Housing Holder Unit Connector	○	○※B	○			
FUJIFILM	FinePix F80EXR	WP-FXF80	★	Optical	△※XV	△※XV	△※XV	△※XV	Optical D Cable Type L/Bush W52 Set	Optical D Cable SS Type L/Bush W52 Set	Housing Holder Unit Connector	△※K	○	○		
	FinePix Z100fd / Z200fd / Z250fd	WP-FXZ100	—	Optical	○	—	—	—	—	—	—	○	○※B	○		
	FinePix F200EXR	WP-FXF200	★	Optical	△※VI	△※VI	△※VI	△※VI	Optical D Cable Type L/Cap W41 Set	Optical D Cable SS Type L/Cap W41 Set	Housing Flash Diffuser	△※G	○	○		
	FinePix F100fd	WP-FXF100	★	Optical	○	—	○	—	Optical D Cable Type L/Cap W41 Set	Optical D Cable SS Type L/Cap W41 Set	Housing Flash Diffuser	○	○※B	○		
	FinePix F50fd	WP-FXF50	—	Optical	○	○	—	—	Optical D Cable Type L/Cap W39 Set	—	Mount Base	○	○	○		
	FinePix F40fd	WP-FXF40	—	Optical	○	○	—	—	Optical D Cable Type L/Cap W34 Set	—	Mount Base	○	○※B	○		
	FinePix F31fd / F30	WP-FXF30	—	Optical	○	○	—	—	Optical D Cable Type L/Cap W27 Set	—	Mount Base	○	○	○		
	FinePix F11 / F10	WP-FXF10	—	Optical	○	○	—	—	Optical D Cable Type L/Cap W3 Set	—	Mount Base	○	○	○		
	FinePix F810 / F710	WP-FX701	—	Optical	△※IX	△※IX	—	—	Optical D Cable Type L/Cap W13 Set	—	Mount Base	×※F	○	○		
SONY	T90	MPK-THGB	—	Optical	○	×※X	—	—	Optical D Cable Type L/Cap W47 Set	—	Mount Base	○	○※B	○		
	T700	MPK-THGB MPK-THG	—	Optical	○	×※X	—	—	Optical D Cable Type L/Cap W47 Set	—	Mount Base	○	○※B	○		
	T77	MPK-THGB MPK-THG	—	Optical	○	×※X	—	—	Optical D Cable Type L/Cap W47 Set	—	Mount Base	○	○※B	○		
	W300	MPK-WD	—	Optical	○	○	—	—	Optical D Cable Type L/Cap W43 Set	—	Mount Base	○	○	○		
	W170	MPK-WD	—	Optical	○	○	—	—	Optical D Cable Type L/Cap W43 Set	—	Mount Base	○	○	○		
	W7 / W5 / W1	MPK-WA	—	Optical	○	○	—	—	Optical D Cable Type L/Cap W24 Set	—	Mount Base	○	○	○		
	N2 / N1	MPK-NA	—	Optical	○	○	—	—	Optical D Cable Type L/Cap W25 Set	—	Mount Base	○	○	○		
	P100 / P150	MPK-PHB	—	Optical	○	○	—	—	Optical D Cable Type L/Cap W14 Set	—	Mount Base	○	○	○		
Nikon	E7900 / E5900	WP-CP4	—	Optical	○	○	—	—	Optical D Cable Type L/Cap W11 Set	—	Mount Base	○	○※B	○		
	E5200 / E4200	WP-CP2	—	Optical	○	○	—	—	Optical D Cable Type L/Cap W11 Set	—	Mount Base	○	○※B	○		
	E4100 / E3200 / E2200	WP-CP1	—	Optical	○	○	—	—	Optical D Cable Type L/Cap W12 Set	—	Mount Base	○	○※B	○		

< Remarks > ■ : Attached via Mount Base etc. □ : Directly attached on a housing ★ : Attachable ○ : Usable △ : Some operational limitation is applied — : Not compatible ▲ : To be confirmed × : Not usable

[Digital SLR Camera]

Mfr.	Camera	Housing	Close-up Lens		Connection method	Accessories for Z-240 / D-2000 / S-2000 strobe								Shoe Base
			M67 Lens			Necessary optical/electrical cable	Necessary options to attach Cable product	Compatible flash mode						
			UCL-330	UCL-165M67				S-TTL Auto	External Auto (※A)	Manual	Notes			
OLYMPUS	E-PL2	PT-EP03	■※14	■※14	Optical	Optical D Cable Type L/Double Hole Rubber Bush Set	Optical D Cable L Type L/Double Hole Rubber Bush Set	Optical D Cable SS Type L/Double Hole Rubber Bush Set	—	○	○	○	※H※L	★
	E-PL1	PT-EP01	■※14	■※14	Optical	Optical D Cable Type L/Double Hole Rubber Bush Set	Optical D Cable L Type L/Double Hole Rubber Bush Set	Optical D Cable SS Type L/Double Hole Rubber Bush Set	—	○	○	○	※H※L	★
	E-620	PT-E06	■※22	■※22	Optical	Optical D Cable Type L/Double Hole Rubber Bush Set	Optical D Cable L Type L/Double Hole Rubber Bush Set	Optical D Cable SS Type L/Double Hole Rubber Bush Set	—	○	○	○	※H※L	★
	E-520	PT-E05	■※22	■※22	Optical	Optical D Cable Type L/Double Hole Rubber Bush Set	Optical D Cable L Type L/Double Hole Rubber Bush Set	Optical D Cable SS Type L/Double Hole Rubber Bush Set	—	○	○	○	※H※L	★
	E-410	PT-E03	■※22	■※22	Optical	—	Optical D Cable L Type L/Cap W38 Set	—	—	○	○	○		—
Panasonic	LUMIX GF2	X-2 for GF2	■※23	■※23	Optical	Optical D Cable Type L	Optical D Cable L Type L	Optical D Cable SS Type L	—	○	○	○		
	LUMIX GF1	X-2 for GF1	■※23	■※23	Optical	Optical D Cable Type L	Optical D Cable L Type L	Optical D Cable SS Type L	—	○	○	○		
Canon	EOS50D EOS40D	X-2 for EOS50D/40D	■※23	■※23	Optical	Optical D Cable Type L	Optical D Cable L Type L		—	○	○	○		
					Electrical	5-pin Sync Cord/N		with Electrical Connector	—	○	○	○	※X	
	EOS30D	X-2 for EOS30D	■※23	■※23	Optical	Optical D Cable Type L	Optical D Cable L Type L		—	○	○	○		
					Electrical	5-pin Sync Cord/N		with Electrical Connector	—	○	○	○	※X	
	EOS20D	X-2 for EOS20D	■※23	■※23	Optical	Optical D Cable Type L	Optical D Cable L Type L		—	○	○	○		
					Electrical	5-pin Sync Cord/N		with Electrical Connector	—	○	○	○	※X	
EOS10D	X-2 for EOS10D	■※23	■※23	Optical	Optical D Cable Type L	Optical D Cable L Type L		—	○	○	○			
				Electrical	5-pin Sync Cord/N		with Electrical Connector	—	○	○	○	※X		

[Film Camera]


Mfr.	Camera	Housing	Close-up Lens		Connection method	Accessories for Z-240 / D-2000 / S-2000 strobe								Shoe Base
			M67 Lens			Necessary optical/electrical cable	Necessary options to attach Cable product	Compatible flash mode						
			UCL-330	UCL-165M67				TTL Auto	External Auto (※A)	Manual	Notes			
Canon	EOS Kiss New EOS Kiss EOS Kiss III EOS Kiss III L	X1-LZ	■※23	■※23	Optical	Optical Cable M Type L	Optical Cable L Type L	Double Optical Cable Type L	—	○	—	○		
					Electrical	5-pin Sync Cord/N		—	○	○	○	※X※Y		
		X1-NZ	■※23	■※23	Optical	Optical Cable M Type L	Optical Cable L Type L	Double Optical Cable Type L	—	○	—	○	※Z	
		X1-Z	■※23	■※23	Optical	Optical Cable M Type L	Optical Cable L Type L	Double Optical Cable Type L	—	○	—	○	※Z	
		X1-LG	■※23	■※23	Electrical	5-pin Sync Cord/N			—	○	○	○	※X※Y	
		X1-G	■※23	■※23	Electrical	5-pin Sync Cord/N			—	○	○	○	※X※Y	
		X1-L	■※23	■※23	Electrical	5-pin Sync Cord/N			—	○	○	○	※X※Y	
		New X-1	■※23	■※23	Electrical	5-pin Sync Cord/N			—	○	○	○	※X※Y	
Nikon	Nikonos V	—	—	—	Electrical	5-pin Sync Cord/N			—	○	○	○	※X※Y	
	Nikonos RS	—	—	—	Electrical	5-pin Sync Cord/N			—	○	○	○	※X※Y	
	F100	Nexus F100	—	—	Electrical	5-pin Sync Cord/N			—	○	○	○	※X※Y	
	F90	Nexus Master	—	—	Electrical	5-pin Sync Cord/N			—	○	○	○	※X※Y	
	F4	Nexus F4PRO	—	—	Electrical	5-pin Sync Cord/N			—	○	○	○	※X※Y	

< Remarks > ■ : Attached via Mount Base etc. □ : Directly attached on a housing ★ : Attachable ○ : Usable △ : Some operational limitation is applied — : Not compatible ▲ : To be confirmed × : Not usable

- ※ A Z-240 / D-2000 / D-2000W / D-2000Wn only. D-2000S / S-2000 is not equipped with External Auto mode.
- ※ B For camera that cannot set aperture value or ISO sensitivity, external Auto mode requires to predict camera operation in a particular shooting condition based on [aperture range] [ISO sensitivity range] to make appropriate strobe setting.
- ※ C S-TTL Auto mode is not usable when built-in flash mode is set to [Slave].
- ※ D S-TTL Auto mode is not usable when camera shooting mode is set to [M Manual].
- ※ E [S-TTL Auto] works without any problem but [Manual mode] and [External Auto mode] has operational limitation. More than -1.0 EV setting in Manual mode and actual flash output beyond -1.0 EV on External Auto mode is not usable. This is because built-in flash characteristic where time-lag between [pre-flash] and [main flash] is beyond Advanced Cancel Circuit control range and always has to set it to [OFF].
- ※ F S-TTL Auto is not usable since the camera is non-preflash type. Use Manual/External Auto mode.
- ※ G S-TTL Auto could get less accurate depending on shooting condition. Use External Auto or Manual in such a case.
- ※ H S-TTL Auto mode is not usable when built-in flash mode is set to [Manual].
- ※ I Compatible Optical D Cable Type L/Cap Set is not usable with Shoe Base. Please use wireless connection.
- ※ J Optical D Cable Type L/Double Hole Rubber Bush Set is not usable with 28AD Mount Base PT-045/047.
- ※ K When using shooting mode [M Manual]/[A Aperture priority], the S-TTL Auto works fine with aperture setting range F9 through F16. Except this setting, S-TTL Auto could get less accurate. In such case, please use External Auto or Manual mode.
- ※ L Set camera [RC Mode] to OFF when using INON strobe.
- ※ M When shooting with [S-TTL Auto mode], images will get slightly underexposed in all shooting range. Use flash compensation function of the camera to set flash compensation value between +0.7 EV and +1.0 EV.
- ※ N When shooting with [Manual], or [External Auto mode] (D-2000/Z-240), deactivate Advanced Cancel Circuit Switch and set camera's built-in flash to Manual mode. If camera's built-in flash is set to auto-metering (force flash) mode, external strobe flash range more than -1.5 EV in [Manual mode] or actual flash out-put more than -1.5EV in [External Auto mod] (D-2000/Z-240) is not usable.
- ※ O Electrical connection compatible strobe is Z-240 / D-2000W / D-2000Wn only. D-2000 / D-2000S / S-2000 does not have synchro connector to support electrical connection.
- ※ P When using electrical connection underwater, D-2000W allows change over between [TTL Auto] and [Manual + TTL Auto] only. Changing over between [TTL Auto] and [Manual] or [Manual + TTL Auto] and [Manual] underwater is not supported since specific setting on land is required in those operation (Optical connection or land operation does not have these limitations). D-2000Wn / Z-240 allows change-over between all compatible flash modes.
- ※ Q A housing with optional [Target Light installation] is equivalent to X1-LZ and supports electrical connection.

- ※ I S-TTL Auto accuracy gets decrease with aperture setting F2.8 or greater.
- ※ IV S-TTL Auto is not usable for wireless connection since a Camera Mirror can not be attached in front of built-in flash. Use optical cable connection for S-TTL Auto.
- ※ VI Wireless connection is not usable since Mount Base blocks reflecting light from a camera mirror. Use Optical Cable connection.
- ※ VII S-TTL Auto accuracy could get decrease depending on shooting condition. In such case, use External Auto/Manual mode.
- ※ IX S-TTL Auto is not usable since the camera is non-preflash type. Use Manual/External Auto mode.
- ※ X Unable to attach Camera Mirror. Use Optical Cable connection.
- ※ XII [S-TTL Auto] works without any problem but [Manual mode] and [External Auto mode] has operational limitation. More than -1.0 EV setting in Manual mode and actual flash output beyond -1.0 EV on External Auto mode is not usable. This is because built-in flash characteristic where time-lag between [pre-flash] and [main flash] is beyond Advanced Cancel Circuit control range and always has to set it to [OFF].
- ※ XIII The Shoe Base can be attached only via optional compatible Mount Base.
- ※ XIV When using shooting mode [M Manual]/[A Aperture priority], the S-TTL Auto works fine with aperture setting range F9 through F16. Except this setting, S-TTL Auto could get less accurate. In such case, please use External Auto or Manual mode.

- ※ 1 [Dome Spacer for UWL-100 28AD] is required to attach the Dome Lens Unit for UWL-100.
- ※ 2 [PT Housing 67mm Adapter Ring (For UWL-100 Type1 to PT-005/005s/007/010)] is necessary.
- ※ 3 Type conversion is recommended to get better image quality.
- ※ 4 Slightly vignetting in image corners at zoom wide end. Slightly zoom to telephoto side or crop the image after taking image.
- ※ 5 Significant vignetting can be observed on image corners at zoom wide end. Zoom to telephoto side or crop the image after taking image.
- ※ 6 Vignetting possibility to be examined.
- ※ 7 Slightly vignetting on corners at zoom wide end. Crop vignetting after taking image.
- ※ 8 [Grip Base D4] / [M67 Lens Arm] etc. is necessary.
- ※ 9 Extremely minute vignetting part in one of image corners at wide end may be observed.
- ※ 10 Significant vignetting on either side of an image at zoom wide end even underwater due to optical axis misalignment between the camera and underwater housing. Use zoom middle range towards to telephoto side
- ※ 11 There is vignetting at wide end on land/underwater. Crop an image after shooting or zoom to telephoto side until no vignetting is observed.
- ※ 12 Please refer to attachment lens product brochure or INON web site for detail of specification including vignetting etc of wide lens and combination with super wide lens.
- ※ 13 Olympus [Macro Lens Adapter PMLA-01] is necessary.
- ※ 14 Olympus [Macro Lens Adapter PMLA-EP01] is necessary.
- ※ 15 When using a close-up lens, significant vignetting will be observed at zoom wide end. Zoom towards to telephoto side little bit to avoid vignetting.
- ※ 16 On land, slight vignetting on image corners at zoom wide end even without a close-up lens. Zoom to telephoto side until no vignetting is observed or use without the lens adapter unit.
- ※ 17 On land/underwater, slight vignetting on image corners at zoom wide end even without a close-up lens. Zoom to telephoto side until no vignetting is observed or use without the lens adapter unit.
- ※ 18 [M67-LD Mount Converter for UCL-330/165M67] is necessary.
- ※ 19 [AD-LD Mount Converter for UCL-165AD] is necessary.
- ※ 20 [AD Mount Converter for UCL-165AD] is necessary.
- ※ 21 Significant vignetting on image corners on land and underwater at zoom range from wide end to middle. Zoom to telephoto side to eliminate vignetting.
- ※ 22 [MRS Olympus 50 Port] is necessary.
- ※ 23 [MRS60 Port], [MRS60 Port II], [MRS100 Port TypeU II], [MRS100 Port TypeU III], [Front Port Macro], [Pancake Port] or [M67 Adaptor for Front Port Wide] is necessary.

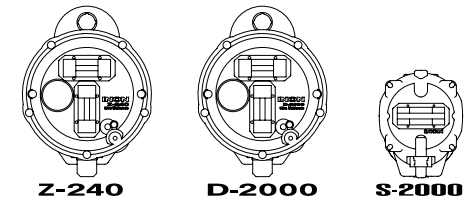

For the latest and up-to-date compatibility, please visit our web site.

INON WEBSITE <http://www.inon.jp>

INON

2011.08